



KLIM DOMINATION

USER MANUAL

0. INTRODUCTION

On behalf of the entire KLIM Team, thank you for purchasing our KLIM Domination mechanical keyboard. We hope it meets your expectations and that you enjoy using this device.

Featuring

- 🔩 Outemu blue mechanical switches
 - 🔩 Anti-ghosting and 6-keyrollover
 - 🔩 High durability (60 million key presses)
- 🔩 Fully customizable RGB lighting
 - 🔩 Multimedia and function keys
 - 🔩 Compatible with Windows, MacOS & PS4

I. PRODUCT DESCRIPTION

The diagram below shows the special keys used to customize the keyboard's lighting effects, as well as the multimedia keys at the top.



Technical specifications

Dimensions	467 x 158 x 36.5 mm
Weight	1260 g
Cable length	180 cm
Switches	Outemu blue

Actuation force	60 g
Keystrokes	60 million
Current	0.4 A ± 10 %
Voltage	5 V

II. USING THE KEYBOARD

The KLIM Domination features a Function key (FN) which can be combined with certain keys to change lighting effects or activate different functions on your computer. It has 21 different lighting effects and 8 colors for each key, giving you total freedom to customize its appearance. There are about 16 million possible combinations at your disposal!

Brightness, speed and direction

- 🖱 FN + ☀️: increases brightness (5 levels)
- 🖱 FN + 🌑: decreases brightness (5 levels)
- 🖱 FN + ⚡️: increases speed. Hold to increase it significantly
- 🖱 FN + 🌑⚡️: decreases speed. Hold to decrease it significantly
- 🖱 FN + 🔄: switches effect direction
- 🖱 FN + 🎨: changes colors

NOTE: The 3 top-right LEDs will flash when the maximum or minimum values have been reached. Speed and direction settings available for certain effects only.

Lighting effects

You can select the desired lighting effect by pressing the following combinations. Each key has 3 different modes; you can cycle through them by pressing it repeatedly:

- 🖱 FN + ☀️: Neon / Breathing mode / Vertical Stripes
- 🖱 FN + 🌑: Reactive wave / Reactive key / Reactive Row
- 🖱 FN + ⚡️: Wave / Blast / Waterfall
- 🖱 FN + 🔄: Horizontal flow / Arrow / Radar mode
- 🖱 FN + 🎨: Multicolor / Raindrops / Vertical flow
- 🖱 FN + 🌑: Wiper / Fixed color / Pulse

Advanced color customization

Customize each key individually using the advanced color customization mode:

1. Press FN + 🌑 to select your custom mode. Press it again to start editing keys. The 3 top-right LEDs will flash, indicating that the customization mode is active
2. Press FN + 🎨 to cycle through the available colors. The 🌑 key will start blinking
3. Press any key on the keyboard to change it to the color shown on the 🌑 key
4. You can turn off specific keys by pressing FN + 🎨 until the 🌑 key is off
5. When you are done editing your key colors, press FN + 🌑 again to save the changes

You can recall this color scheme at any time after using any of the default lighting effects by pressing FN + 🌑.

Multimedia keys

The Function key (FN) does not only allow for color customization, it also gives access to a wide range of useful shortcuts:

FN + F1: Media player

FN + F2: Volume -

FN + F3: Volume +

FN + F4: Mute sound

FN + F5: Stop

FN + F6: Previous track

FN + F7: Play/Pause

FN + F8: Next track

FN + F9: E-mail client

FN + F10: Home (browser)

FN + F11: Calculator

FN + F12: Search (browser)

NOTE: Some function shortcuts are not available on MacOS.

Reset keyboard & Win Lock key

Press **FN + Esc + F1 + F3 + F5** to restore the keyboard's factory settings.

Press **FN + WIN** to deactivate the Windows key.

IV. TROUBLESHOOTING

If you ever encounter any problems, remember that we remain at your disposal to help you with any issues. Do not hesitate to contact us at support@klimtechnologies.com for additional support.

The computer is typing more than one character with a single press

This effect is known as "key chattering" and can sometimes happen due to the nature of mechanical keyboards. Here is how you can fix it:

- 1) Remove the keycap of the affected key (use your fingers or the removal tool included)
- 2) Take a thin, blunt object such as a ballpen and push the blue switch down until it "clicks"
- 3) Repeat this for each of the 4 sides of the switch
- 4) Place the keycap back on the switch and try the affected key

For a video demonstrating the above procedure or for any additional help, contact us directly via e-mail.

It is also recommended that you clean your keyboard regularly to remove any excess dust on the switches and avoid further problems.

We thank you again for your purchase and hope that you enjoy using our KLIM Domination keyboard. Do not hesitate to leave a comment on the site you purchased it from, it will help us tremendously :)

The KLIM team